



# FF851 Freestanding Combination Fridge Freezer

Manual for Installation, Use and Maintenance



Please contact our Customer Care Department for Service on the details below

Customer Care Department • The CIDA Group Ltd. • Harby Road • Llangar • Nottinghamshire • NG13 9HY  
T : 01939 552 012 F : 01939 552 001 E : [sales@cida.co.uk](mailto:sales@cida.co.uk) W : [www.cida.co.uk](http://www.cida.co.uk)  
52154096

Customer Care Department • The CIDA Group Ltd. • Harby Road • Llangar • Nottinghamshire • NG13 9HY  
T : 01939 552 012 F : 01939 552 003 E : [customer@cida.co.uk](mailto:customer@cida.co.uk) W : [www.cida.co.uk](http://www.cida.co.uk)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:-

- The wire which is coloured GREEN and YELLOW must be connected to the terminal which is marked with letter (E) or by the Earth symbol or coloured GREEN and YELLOW.
- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter (N), or coloured BLACK.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter (L) or coloured RED.

If in doubt regarding the electrical connection of this appliance, consult a qualified electrician. Do not shorten the supply cable, the appliance may require removing for servicing.

**N.B. Ensure that the plug socket is situated in an easily accessible place.**

**If the power supply cord is damaged, it must be replaced by a CDA authorised agent.**


### **CE Declarations of Conformity:**

This appliance has been designed, constructed and marketed in compliance with safety requirements of EEC Directive 2006/95/EEC (Low voltage) and requirements of EMC Directive 2004/108/EEC.

 
This appliance has been manufactured to the strictest standards and complies with all applicable legislation, including Electrical safety (LVD) and Electromagnetic interference compatibility (EMC). Parts intended to come into contact with food conform to EEC/89/109.4

### **IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**


At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin. 


6. Relocate the fridge door upper bushing and upper bushing caps to the alternate side (fig. 8). Remove the right door catch and locate the left door catch (this is supplied with the instruction manual).

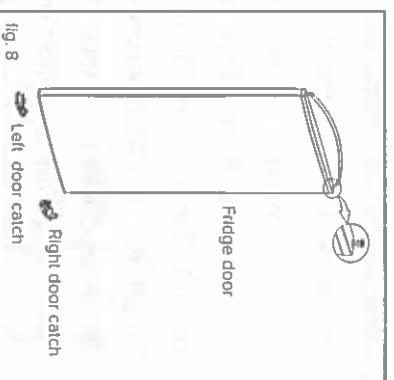

 7. Relocate the freezer door upper bushing, upper bushing caps and lower bushing to the alternate side (fig. 9).

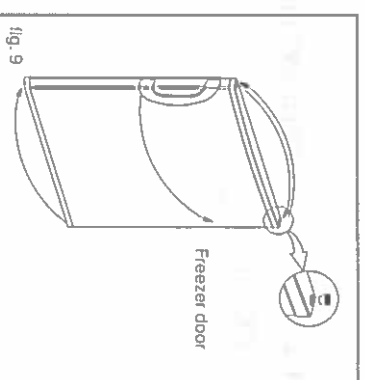

 8. Rotate the central hinge 180°. Assemble the fridge and freezer doors with the central hinge and replace the doors. Secure the central hinge using the screws removed in step 1.

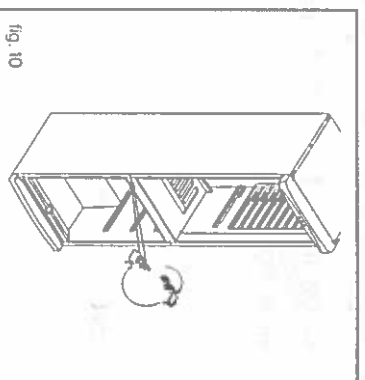

## Before First Use

**You must allow the fridge to settle for at least twenty four hours prior to switching the power on.**

It is recommended that you clean the interior of the appliance prior to first use, using a solution of bicarbonate of soda and warm water and then thoroughly drying the interior.

The fridge may have an odour to it at first use. This will disappear as the appliance cools.

The green power light on the control panel will be lit when you have plugged the appliance into the power supply. Then turn the thermostat dial to position 5 (coldest) and switch on the fast freeze function until the red temperature warning light on the control panel goes off.

When the red light has gone off, turn the thermostat down to the required level (recommended between 2-4) and switch off the fast freeze function.

### **Please note:**

The appliance will work continuously until it comes down to the correct temperature.

If the appliance is switched off, you should allow five minutes before switching it on again to prevent unnecessary damage to the compressor.

## Changing the Light Bulb

**Disconnect the appliance from the power.**

- Remove the light cover by pressing on the hooks on both sides of the cover.
- Unscrew the light bulb to remove it and replace with a new bulb (not more than 15W).
- Replace the light cover and reconnect the power.

## Troubleshooting

If you have any problems with your appliance, you should check the troubleshooting prior to calling CDA Customer Care to prevent unnecessary service calls and potential cost.

### The appliance is not working

 
- Check there is power to the appliance:
- The house fuses are intact and the fuse in the plug has not blown.
- The thermostat is not set to 0 (off position).
- The plug socket is functioning fine. To check this, plug another electrical appliance in to see if the socket is working.
- The temperature of the room is adequate (16°C or above).

### The appliance is working, but not very well

- The appliance is not overloaded.
- The thermostat is set to an appropriate temperature.
- The door is closing properly.
- The cooling system at the rear of the appliance is clean and free of dust, and not touching the rear wall.

## Control Panel

The control panel for the fridge has three lights (Fig. 1).

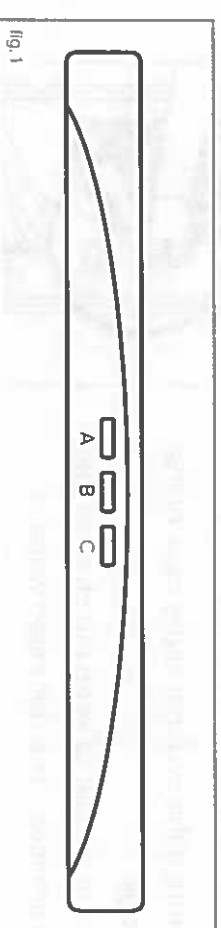

### A. Orange Fast Freeze light

This light is illuminated when the fast freeze function is on.



### B. Green Power light

This light is illuminated when the power supply to appliance is on.



### C. Red Temperature Warning light

This light is illuminated when the freezer compartment temperature is too warm. When this light is illuminated, switch on the fast freeze function until the red light goes out, then switch off the fast freeze function.

### Please note:

If the red light is lit for more than 24 hours, switch off the fast freeze function and call CDA Customer Care.