

UK WIRING INSTRUCTIONS


The product must be earthed.

It has a 13A BS1362 fuse in a 13A BS1363 plug.

To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

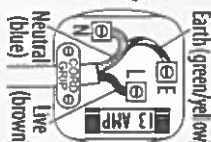

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service, Spectrum Brands (UK) Limited, Fir Street, Fallsworth, Manchester M35 0HS

email: service@russellhobbs.com

telephone: 0845 658 9700 (local rate number)

GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

ONLINE

www.russellhobbs.co.uk for more products

REGISTRATION AND PRIZE DRAW

Collect your free reward, and a chance to win £10,000.

Visit www.productregister.co.uk/rhobbs



Russell Hobbs




instructions

£10,000 prize draw
PLUS Free Rewards Gallery
Register online now to
collect your reward
See back for
details

Read the instructions and keep them safe. Pass them on if you pass the toaster on.
Remove all packaging before use.

IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 The toaster must only be used by or under the supervision of a responsible adult. Use and store it out of reach of children.
- 2 Don't put the toaster in liquid, don't use it in a bathroom, near water, or outdoors. 
- 3 Sit the toaster upright, on a stable, level, heat-resistant surface.
- 4 Bread may burn. Don't use the toaster near or below curtains or other combustible materials, and watch it while it's hot.
- 5 The area round the toasting slots gets very hot – don't touch!
- 6 Route the cable so it doesn't overhang and can't be caught.
- 7 If you're only using one slot, don't let anything get into the empty slot, as both slots will be "live" when the lever is lowered.
- 8 Don't cover the toaster, or put anything on top of it – you'll cause a fire hazard.
- 9 If bread gets jammed, unplug the toaster, let it cool, then remove the bread. Don't use anything sharp, you'll damage the elements.
- 10 Don't toast sandwiches or buttered items, they may catch fire.
- 11 Don't use torn, curled up, oversized, or misshapen slices of bread, as these may jam the toaster.
- 12 Unplug the toaster when not in use, before moving and before cleaning. Let it cool down fully before cleaning and storing away.
- 13 Clean the crumbs out of your toaster frequently, to avoid a build up of crumbs. This is unhygienic, and could cause a fire hazard.
- 14 Don't use the toaster unless the crumb tray is fitted and closed.
- 15 Don't connect the toaster to an external timer or remote control system.
- 16 Don't use the toaster for any purpose other than those described in these instructions.
- 17 Don't use the toaster if it's damaged or malfunctions.
- 18 If the cable is damaged, return the toaster, to avoid hazard.

household use only

BEFORE USING FOR THE FIRST TIME

- Check the slots are empty.
- Set the browning control to the highest setting (7).
- Operate the toaster without bread, to cure the new elements.
- They may smoke a bit, but it's nothing to worry about – ensure the room is well ventilated.